

**Key to starting/charging circuit diagram -
Bonneville T100**

Item number	Description
1	Engine earth
2	Battery
3	Starter solenoid
4	Starter motor
5	Alternator
6	Carburettor thermostat switch
7	Fuse 11
8	Starter relay
9	Diode pack
10	Rectifier regulator
11	Fuses 2, 3 and 5
12	Clutch switch
13	Sidestand switch
14	Neutral switch
15	Fuse 9
16	Igniter
17	Instrument assembly
18	Ignition switch
19	Engine kill switch
20	Starter button
21	Alarm control unit

Wire colour codes	
B	Black
U	Blue
N	Brown
G	Green
S	Slate grey
O	Orange
K	Pink
R	Red
P	Purple
W	White
Y	Yellow
LG	Light green
LU	Light blue

Starting/Charging - Bonneville T100

