


NORMAN HYDE



FOOTREST KIT FOR NEW BONNEVILLE

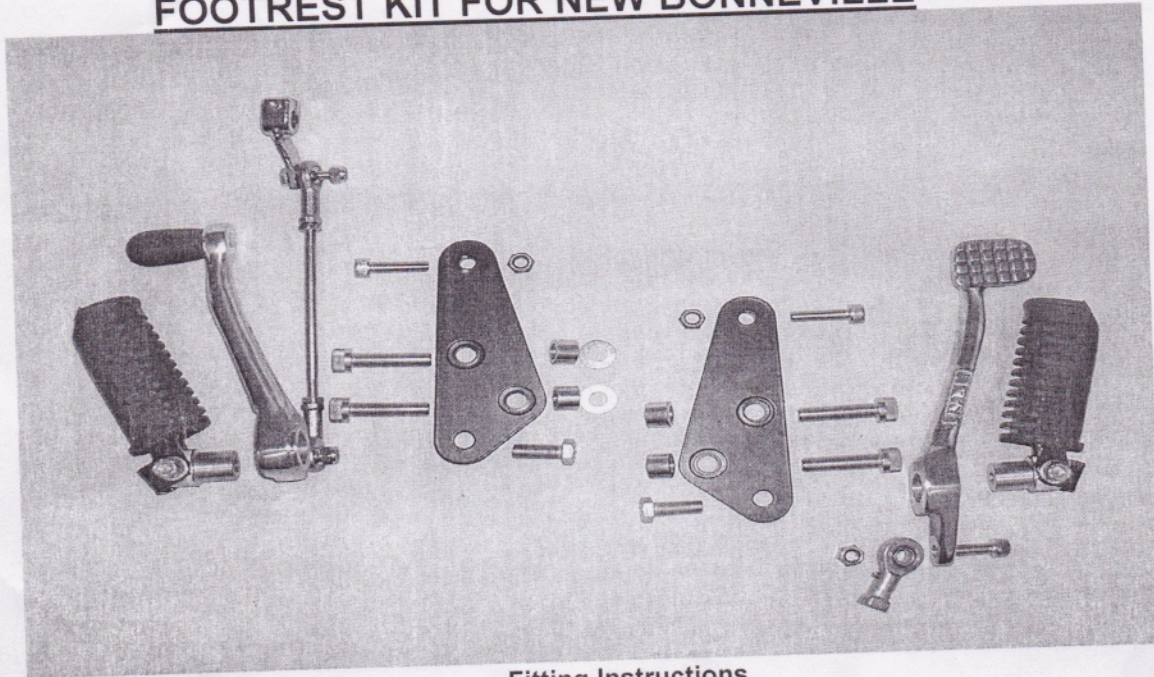

Fitting Instructions

Left (gear pedal) side.


Remove original footrest assembly and gear pedal.
Remove the two 10mm cap head screws holding swinging arm mounting to frame.
Grease pedal pivot and mount new footrest plate and gear pedal assembly as shown above.
Ensure the two spacers and two washers are fitted between new footrest plate and frame.
Adjust pedal position to suit before finally tightening all fixings.

Right (brake pedal) side.

Remove side panel cover.
Remove original footrest assembly and brake pedal.
Remove fork end from master cylinder pushrod and leave lock-nut in place. Remove the two 10mm cap head screws holding swinging arm mounting to frame. Remove the two master cylinder mounting screws but leave master cylinder attached by feed and brake hoses. Fit new rod end joint supplied to master cylinder pushrod. Fit master cylinder to new bracket using the original mounting screws and the nuts supplied. Attach new bracket to frame using two 8mm cap head screws supplied. (refer to picture right) Grease pedal pivot and mount new footrest plate and brake pedal assembly as shown above. Ensure the two spacers are fitted between new footrest plate and frame. Connect rod end joint to brake pedal. If the master cylinder push rod fouls on the frame, add washers supplied between new plate and original mounting to give minimum clearance. It may also be necessary to slightly reposition the banjo fitting on the master cylinder to give clearance for the side panel cover. This should not result in any loss of fluid or air ingress but always check and re-bleed if required. Adjust brake pedal position to suit before tightening all fixings and check rear brake operation. Refit side panel cover.

Left (gear pedal) side. Right (brake pedal) side.

SEE IMPORTANT INFORMATION OVERLEAF

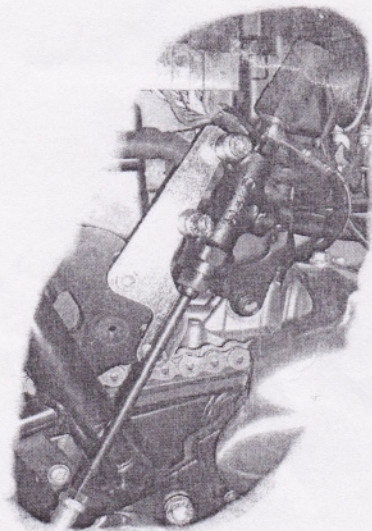


NORMAN HYDE

FOOTREST KIT FOR NEW BONNEVILLE

WARNING

This kit has safety critical parts and we recommend that it should only be fitted by a trained mechanic or other competent person.

QTY.	PART No.	DESCRIPTION
2	1105	FOOTREST BOSS
2	1106	FOOTREST BLADE STRAIGHT
2	1107	FOOTREST RUBBER
1	1124	GEAR PEDAL RUBBER
2	1139	WASHER 10mm
4	1216	WASHER 8MM
1	1275	BRAKE PEDAL
1	1282	GEAR PEDAL
1	1283	GEAR OPERATING LEVER
4	1284	CAP SCREW 10X1.25 X 40
4	1285	SPACER 16 X 11 X 11
1	1286	MOUNTING PLATE M/CYL
1	1287	ROD END JOINT 8mm
1	1288	SIDE PLATE L/HAND
1	1289	SIDE PLATE R/HAND
5	1290	M8 X 30 CAP HEAD SCREW
5	1291	M8 NYLOK NUT
1	1323	LINK ROD 140mm
2	1324	M6 ROD END JOINT
1	1331	BOLT X 25
2	1332	M6 NYLOK NUT
2	1363	HALF NUT 6mm
2	1377	BOLT M10 x 25
2	1405	BOLT M6 x 20
2	1415	M8 NYLOK NUT DEEP
2	1417	BOLT M8 X 30

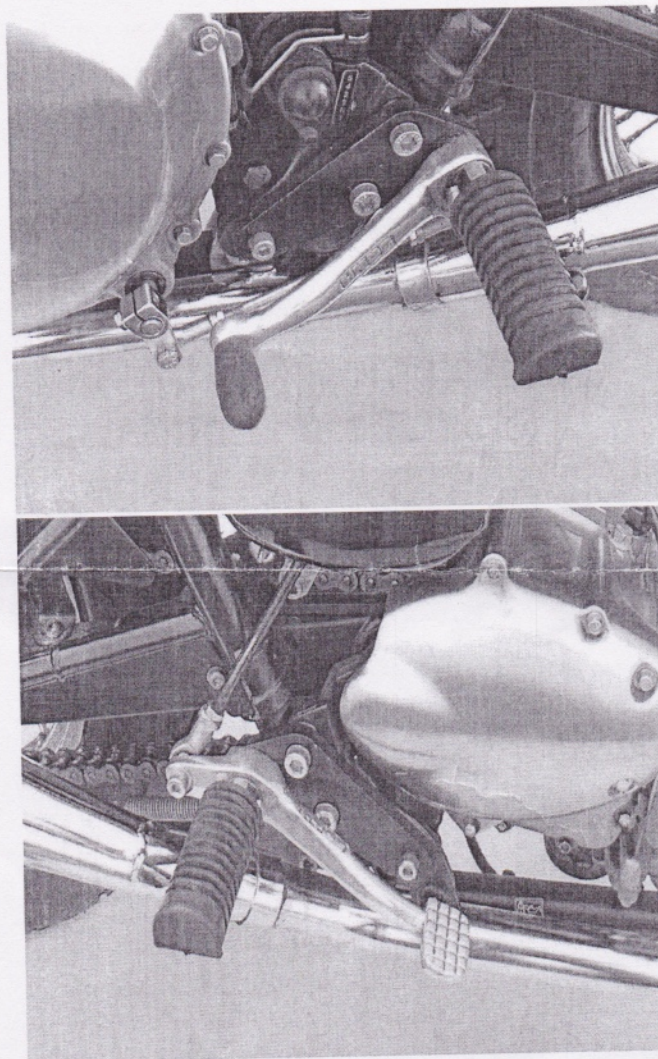

SPARE PARTS FOR THIS KIT ARE AVAILABLE.
PLEASE QUOTE THE PART NUMBER ABOVE WHEN ORDERING

Office 3 Edgefield House, North Muskham, Notts NG23 6ES
0333 8002300 hinckley@normanhyde.co.uk